



LAUNCH A FART ATTACK!

5+



WARRIOR WHISTLER



SENSEI STEN CHI



GRAND GASSER



SOUR SILENCER



STEALTHY STENCHER



NOBLE BLASTER



SLY BACKWIND



WISE WINDBREAKER



COLLECT THEM ALL !


PACKAGE CONTENTS: 1 FART NINJA, 1 INSTRUCTION SHEET
REQUIRED: 3 X 1.5V "LR44/AG13" BUTTON CELL BATTERIES (INCLUDED)

SET UP

1 SLIDE THE SWITCH AT THE BACK OF HIS HEAD TO ON.




2 HIDE YOUR FART NINJA. BUT MAKE SURE NOTHING IS BLOCKING THEIR FACE.

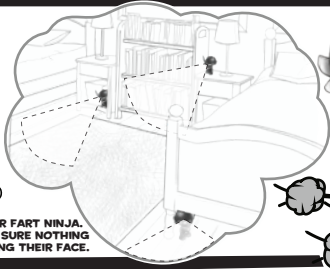

SENSOR

3

EACH TIME THEIR SENSOR IS TRIGGERED, YOUR FART NINJA WILL RELEASE A THUNDEROUS FART.

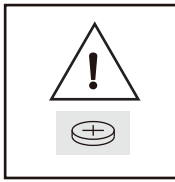

- WARNING: This product contains a Button or Coin Cell Battery. A swallowed Button or Coin Cell Battery can cause internal chemical burns in as little as two hours and lead to death. Dispose of used batteries immediately. Keep new and used batteries away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention. In Australia, call the 24-hour Poisons Information Centre on 13 11 26 for fast, expert advice.
- WARNING -KEEP BATTERIES OUT OF REACH OF CHILDREN
- Examine devices and make sure the battery compartment is correctly secured, e.g. that the screw or other mechanical fastener is tightened. Do not use if compartment is not secure.

Funrise®



www.funrise.com

FOR MORE INFO VISIT
WWW.FARTNINJAS.COM

* All instruction sheets must be retained since it contains important information.
© 2023 Funrise. All Rights Reserved