

COWABONGA SKATE RC MIKEY


CONTENTS / CONTENU / CONTENIDO / INHOUD / CONTENUTO / CONTEÚDOS / INHALT

REMOTE FUNCTIONS / FONCTIONS DE LA TÉLÉCOMMANDE / FUNCIONES DEL MANDO / AFSTANDSBEDIENINGSFUNCTIES / FUNZIONI DEL RADIOCOMANDO / FUNÇÕES DO CONTROLE REMOTO / FERNSTEUERUNG



POWER / ALIMENTATION / ALIMENTACIÓN / LEISTUNG / ENERGIA / ALIMENTAÇÃO ELÉTRICA / STROOM

- 4 PUSH BUTTONS TO DRIVE
5 OPEN AND CLOSE HANDLE ON CONTROLLER TO TURN

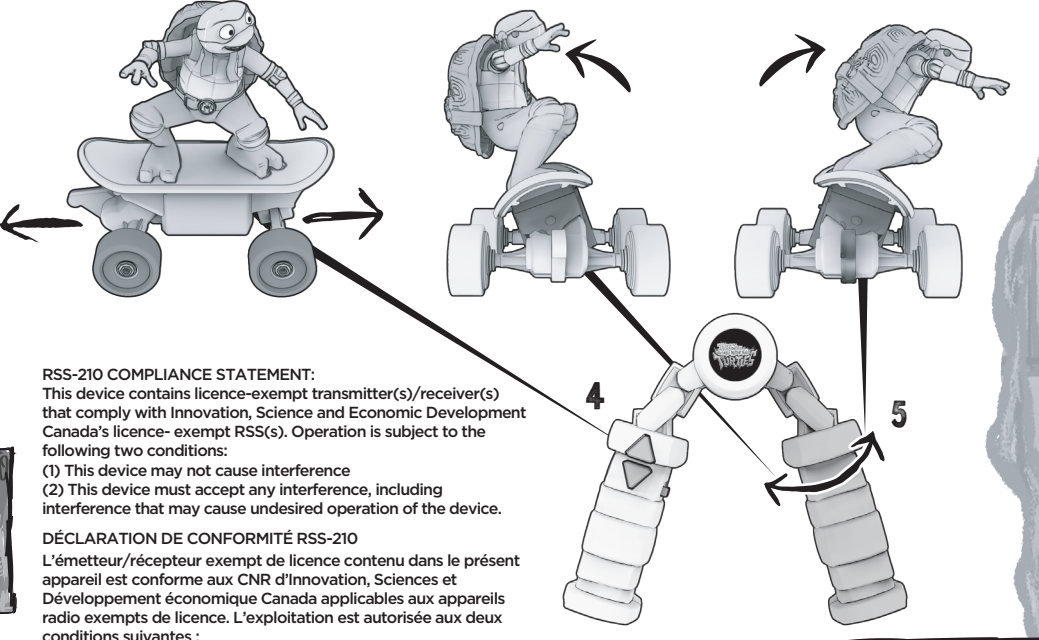


- 1 BATTERIES: 2 AAA (NOT INCLUDED)
2 CHARGING INDICATOR

- INDICATEUR LED
EN CHARGE: ROUGE
COMPLÈTEMENT CHARGÉ: VERT

- LED-ANZEIGE
LÄDT: ROT
VOLLSTÄNDIG GELADEN: GRÜN

- INDICADOR LED
A CARGAR: VERMELHO
CARGA A 100%: VERDE

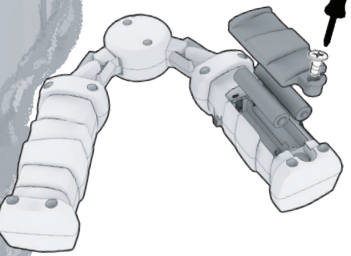


- INDICADOR LED
CARGANDO: ROJO
CARGA COMPLETADA: VERDE

Note: Always turn off when not in use
Remarque: Éteignez toujours l'appareil lorsqu'il n'est pas utilisé

RSS-210 COMPLIANCE STATEMENT: This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s).

DÉCLARATION DE CONFORMITÉ RSS-210
L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence.

- 3 TURN ON REMOTE AND SKATEBOARD
ALLUMER LA TÉLÉCOMMANDE ET FAIRE DE LA PLANCHE À ROULETTES

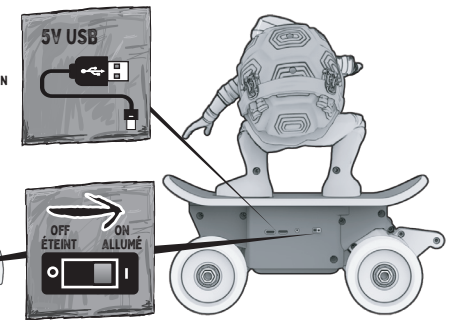

Please fully charge the toy for the first time use and always keep the battery in fully charged condition even when the toy is not in use.



We reserve the right to improve/amend specifications and colors without notice.

* All instruction sheets must be retained since it contains important information.



IC: 26260-F71124A / IC: 26260-F71124B MODEL / MODÈLE: 71124

© 2024 Viacom Overseas Holdings C.V. All Rights Reserved.