

#71135 INST_ML

SIZE: 149 x 209 mm

BLANK SIZE: 298 X 209 mm

JOB NO.: T-079A-24

DATE: MAY 28, 2024

nickelodeon

TEENAGE MUTANT NINJA TURTLES

PARTY CRUISER™



MODEL /MODÈLE : 71135

- GB BATTERY & POWER F BATTERIE ET ALIMENTATION
- E BATERÍA Y ALIMENTACIÓN D BATTERIE UND STROMVERSORGUNG
- I CARICA BATTERIA P BATERIA E ALIMENTAÇÃO ELÉTRICA
- NL BATTERIJ EN VERMOGEN

1. INSTALL 3 AAA BATTERIES
2. SLIDE SWITCH TO ON (I) POSITION

1. INSTALLEZ 3 PILES AAA
2. GLISSEZ L'INTERRUPTEUR EN POSITION EN MARCHÉ (I)



1. INSERTE 3 PILAS AAA
2. DESLICE EL INTERRUPTOR A LA POSICIÓN ON (I)

1. LEGEN SIE 3 AAA-BATTERIEN EIN
2. SCHIEBEN SIE DEN SCHALTER IN DIE POSITION EIN (I)

1. INSTALLARE 3 BATTERIE AAA
2. FAR SCORRERE L'INTERRUTTORE IN POSIZIONE ON (I)

1. INSTALAR 3 PILHAS AAA
2. MOVER O INTERRUPTOR PARA A POSIÇÃO ON (I)

1. PLAATS 3 AAA-BATTERIJEN
2. SCHUIF DE SCHAKELAAR NAAR DE ON (I)-STAND

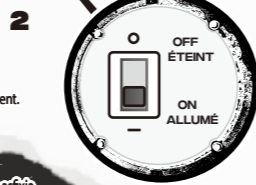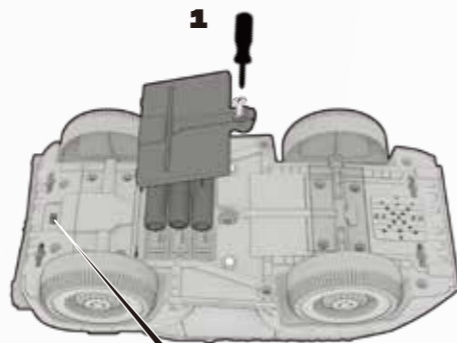

• Warning. Not suitable for children under 36 months. Small parts. Choking hazard.
 • Attention, ne convient pas aux enfants de moins de trois (3) ans. Petits morceaux ! Danger d'étouffement.
 • Atención. No es adecuado para niños menores de 36 meses. Partes pequeñas. Peligro de asfixia.
 • Achtung. Nicht geeignet fuer Kinder unter 3 Jahren. Kleinteile. Erstickungsgefahr.
 • Waarschuwing. niet geschikt voor kinderen onder 3 jaar. Kleine onderdelen. Verstikkingsgevaar.
 • Attenzione. non adatto ai bambini con meno di 3 anni di età. Pezzi piccoli. Pericolo di soffocamento.
 • Atenção. Não é adequado para crianças com menos de 36 meses. Contém peças pequenas. Perigo de asfixia.


* All instruction sheets must be retained since it contains important information. * Toutes les fiches d'instructions contiennent des informations importantes et doivent donc être conservées. * Debe conservar todas las hojas de instrucciones porque contienen información importante. * Alle Anleitungen müssen aufbewahrt werden, da sie wichtige Informationen enthalten. * Alle instructiebladen moeten worden bewaard, omdat ze belangrijke informatie bevatten. * Tutte le istruzioni vanno conservate, in quanto contengono informazioni importanti. * Todos os manuais de instruções devem ser preservados, pois contém informações importantes.

3+

- GB PLAYING F JOUER E REPRODUCIENDO D SPIELEN
- I GIOCO P A JOGAR NL SPELEN


1. PUSH TO SHOOT
POUSSEZ POUR TIRER
PRESIONA PARA DISPARAR
ZUM SCHIEßEN DRÜCKEN
PREMI PER SPARARE
EMPURRAR PARA DISPARAR
DRUK IN OM TE SCHIETEN

2. PUSH SKATEBOARDS FOR CHARACTERS
PLANCHES À ROULETTES À POUSSER POUR LES PERSONNAGES
PRESIONA LOS MONOPATINES PARA LOS PERSONAJES
SCHIEBE DIE SKATEBOARDS FÜR CHARAKTERE
SPINGI GLI SKATEBOARD PER I PERSONAGGI
EMPURRAR SKATES PARA OS PERSONAGENS
DUW OP DE SKATEBOARDS VOOR DE PERSONAGES

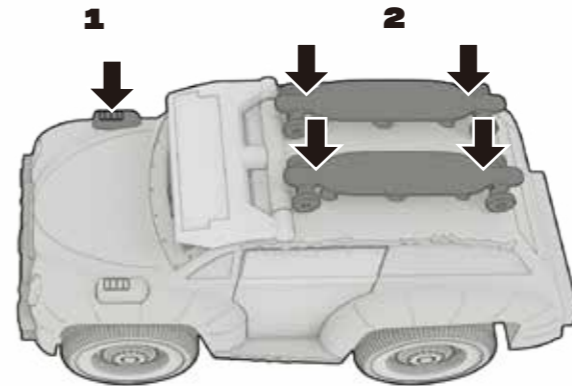

3. RESET HEAD LIGHT
RÉINITIALISEZ LES PHARES
RESTABLECE LA LUZ DELANTERA
SCHEINWERFER ZURÜCKSETZEN
RIPRISTINA FANALE
REPOR FAROL
KOPLAMP RESETTEN

4. RESET CHARACTERS
RÉINITIALISEZ LES PERSONNAGES
RESTABLECE A LOS PERSONAJES
CHARAKTERE ZURÜCKSETZEN
RIPRISTINA PERSONAGGI
REPOR PERSONAGENS
PERSONAGES RESETTEN

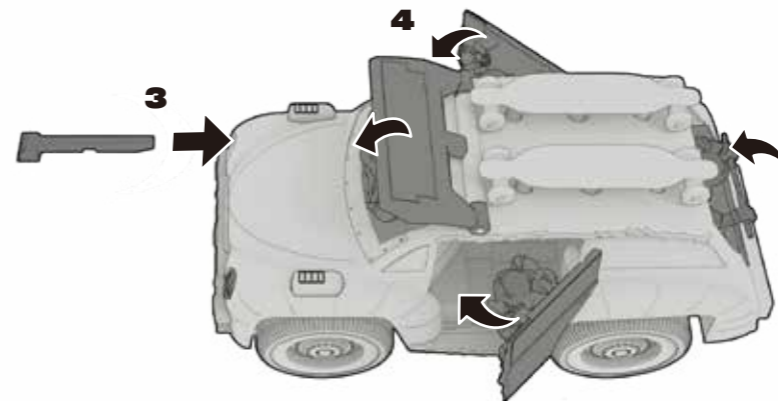

WARNING:
CHOKING HAZARD - Small parts.
Not for children under 3 years.

ATTENTION:
DANGER D'ÉTOUFFEMENT - Petites pièces.
Ne convient pas aux enfants de moins de 3 ans.

© 2024 VIACOM.



FUNRISE.COM