

nickelodeon

TEENAGE MUTANT NINJA TURTLES

ROLL-OVER RC™



BATTERY & POWER


1. INSTALL 2 AAA BATTERIES
2. SLIDE SWITCH TO "ON" POSITION

Note: Always turn off when not in use

CHARGING INDICATOR

CHARGING: RED
 CHARGED: GREEN
 PAIRING: CONTROLLER BLINKING




Please fully charge the toy for the first time and always keep the battery in fully charged condition even when the toy is not in use. This will help to ensure that your battery will work properly and prevent it from weakening over time.

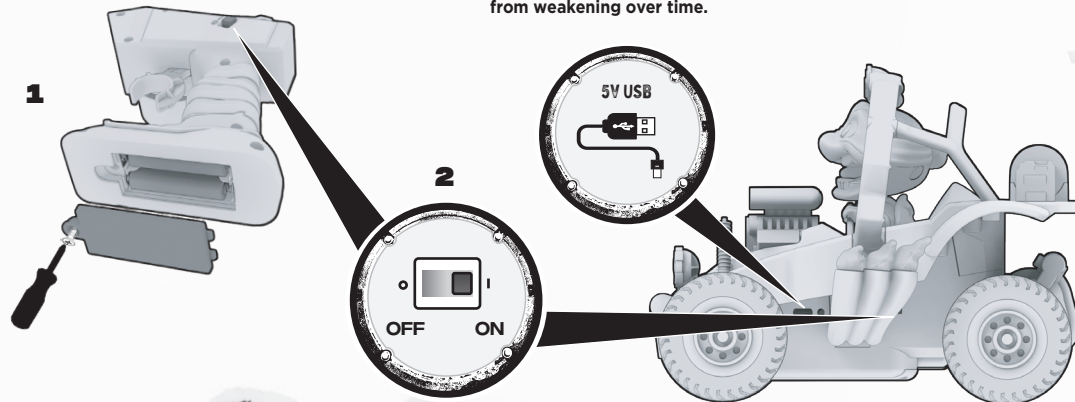

REMOTE FUNCTIONS

1, 2. ROTATE KNOB ON CONTROLLER TO TURN & ROLL-OVER

3. PUSH/PULL TRIGGER TO DRIVE

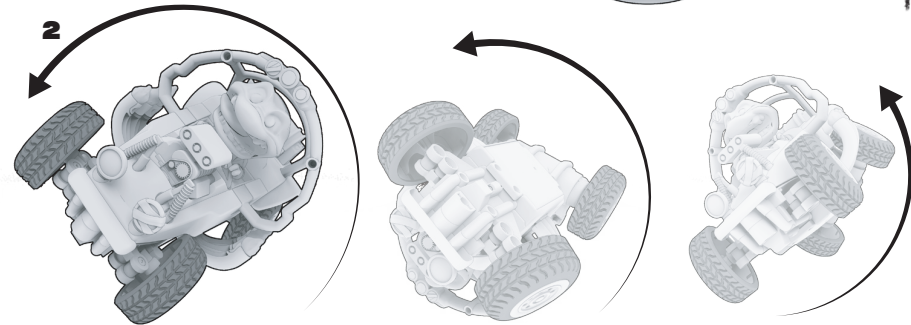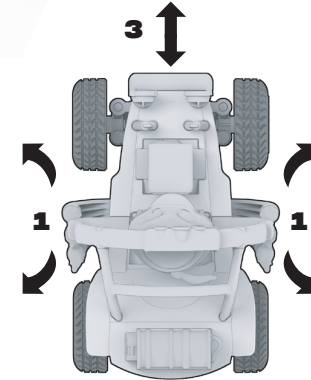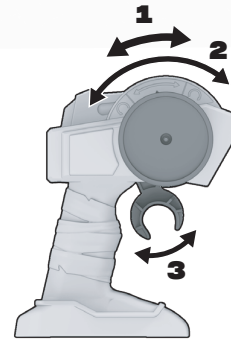

NOTE: If the vehicle is immobilized on its side, turn steering knob (2), then push/pull trigger (3) to upright car.

FCC label compliance statement:

This device complies with part 15 of the FCC rules.

Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and

2. This device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
 - Increase the separation between the equipment and receiver
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
 - Consult the dealer or an experienced radio/TV technician for help
- Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment



FCC ID : 2AWSR-F71136A /
 FCC ID : 2AWSR-F71136B
 MODEL : 71136

5+

We reserve the right to improve/amend specifications and colors without notice.

* All instruction sheets must be retained since it contains important information.

FUNRISE
 FUNRISE.COM

Instagram Facebook YouTube

Distributed by Funrise, Inc., Sherman Oaks, CA 91403 U.S.A.
 1800-882-3808