


(FRONT)

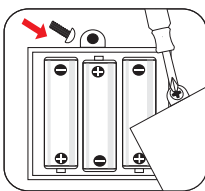

THIS PRODUCT REQUIRES 3 "AAA" (LR03) BATTERIES (INCLUDED). 1.5V x 3
ALKALINE BATTERIES ARE RECOMMENDED FOR BEST PERFORMANCE. BATTERIES SHOULD ONLY BE REPLACED BY AN ADULT.

BATTERY REPLACEMENT:
USE A SCREWDRIVER (NOT INCLUDED) TO REMOVE THE BATTERY COVER. PLACE NEW BATTERIES IN THE BATTERY COMPARTMENT AND REPLACE THE BATTERY COVER.

BATTERY WARNINGS:
USE ONLY BATTERIES OF THE SAME OR EQUIVALENT TYPE AS RECOMMENDED. DO NOT MIX OLD AND NEW BATTERIES. DO NOT MIX ALKALINE, STANDARD (CARBON-ZINC), OR RECHARGEABLE BATTERIES. REMOVE BATTERIES IF PRODUCT IS TO BE LEFT UNUSED FOR A LONG TIME. NON-RECHARGEABLE BATTERIES ARE NOT TO BE RECHARGED. BATTERIES ARE TO BE INSERTED WITH THE CORRECT POLARITY (+ AND -). EXHAUSTED BATTERIES ARE TO BE REMOVED FROM THE TOY. THE SUPPLY TERMINALS ARE NOT TO BE SHORT-CIRCUITED. RECHARGEABLE BATTERIES ARE TO BE REMOVED FROM THE TOY BEFORE BEING CHARGED. RECHARGEABLE BATTERIES ARE ONLY TO BE CHARGED UNDER ADULT SUPERVISION.

DEVELOPS

FINE
MOTOR SKILLS

AS CHILD
USES DRILL
AND VEHICLE

HAND-EYE
COORDINATION

AS CHILD USES TOOLS
TO ACTIVATE
AND INTERACT
WITH VEHICLE



www.cat.com / www.caterpillar.com
© 2021 Caterpillar. All Rights Reserved.
CAT, CATERPILLAR, LET'S DO THE WORK,
their respective logos, "Caterpillar
Yellow", the "Power Edge" and Cat
"Modern Hex" trade dress as well as
corporate and product identity used
herein, are trademarks of Caterpillar and
may not be used without permission.
Funrise Inc., a licensee of Caterpillar Inc.



FIX-IT FLEET™



2+

(BACK)

1.



2.



1.



2.

