

FRONT



Goofy Goober Plush
3+

THIS PRODUCT REQUIRES 3 "AAA" (LR03) BATTERIES (INCLUDED). 1.5V x 3
 ALKALINE BATTERIES ARE RECOMMENDED FOR BEST PERFORMANCE.
 BATTERIES SHOULD ONLY BE REPLACED BY AN ADULT.

BATTERY REPLACEMENT:
 USE A SCREWDRIVER (NOT INCLUDED) TO REMOVE THE BATTERY COVER.
 PLACE NEW BATTERIES IN THE BATTERY COMPARTMENT AND REPLACE THE BATTERY COVER.

BATTERY WARNINGS:
 USE ONLY BATTERIES OF THE SAME OR EQUIVALENT TYPE AS RECOMMENDED.
 DO NOT MIX OLD AND NEW BATTERIES.
 DO NOT MIX ALKALINE, STANDARD (CARBON-ZINC), OR RECHARGEABLE BATTERIES.
 REMOVE BATTERIES IF PRODUCT IS TO BE LEFT UNUSED FOR A LONG TIME.
 NON-RECHARGEABLE BATTERIES ARE NOT TO BE RECHARGED.
 BATTERIES ARE TO BE INSERTED WITH THE CORRECT POLARITY (+ AND -).
 EXHAUSTED BATTERIES ARE TO BE REMOVED FROM THE TOY.
 THE SUPPLY TERMINALS ARE NOT TO BE SHORT-CIRCUITED.
 RECHARGEABLE BATTERIES ARE TO BE REMOVED FROM THE TOY BEFORE BEING CHARGED.
 RECHARGEABLE BATTERIES ARE ONLY TO BE CHARGED UNDER ADULT SUPERVISION.

Warning! Not suitable for children under 36 months.
 Small parts. Choking hazard.

 
 
* All instruction sheets must be retained since it contains important information.
 © 2025 Funrise. All Rights Reserved.



©2025 PARAMOUNT PICTURES AND VIACOM INTERNATIONAL
 INC. ALL RIGHTS RESERVED. SPONGEBOB SQUAREPANTS
 CREATED BY STEPHEN HILLENBURG.

Nick.com/SpongeBob

- 1** On the back of Spongebob's head, open cover with Phillips head screwdriver.
- 2** Insert 3 NEW AAA batteries and replace cover. Push switch to "I" position.
- 3** Pull arms to start the fun!

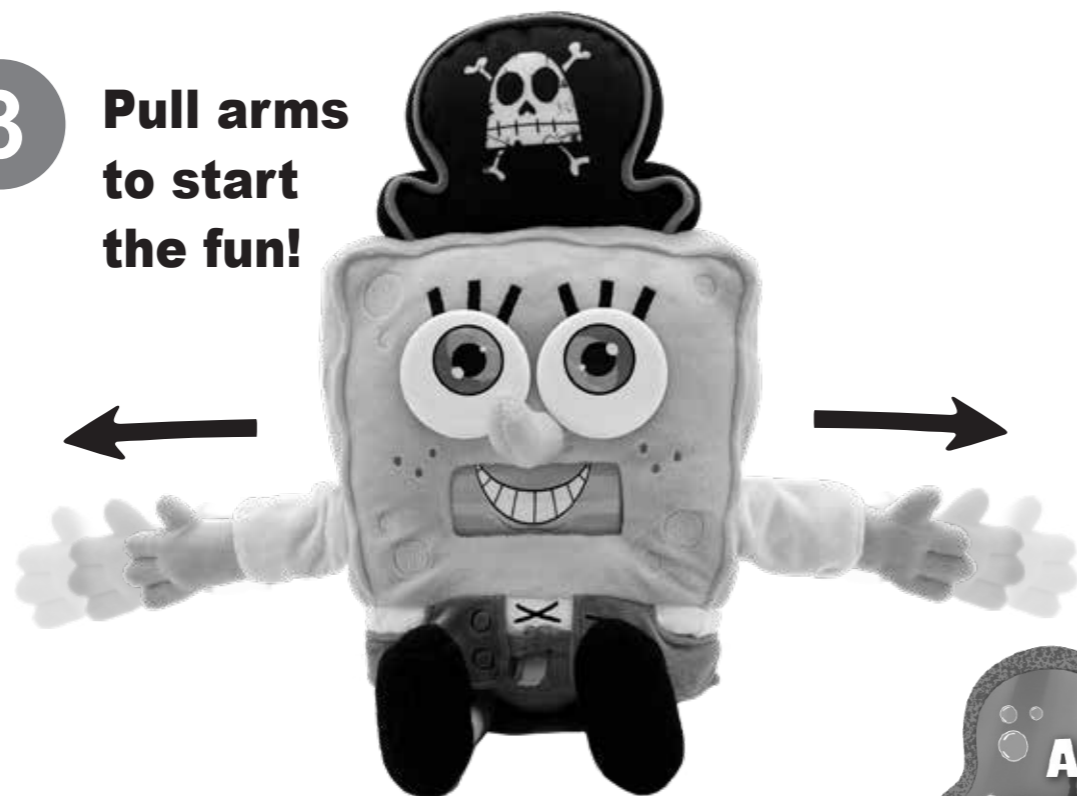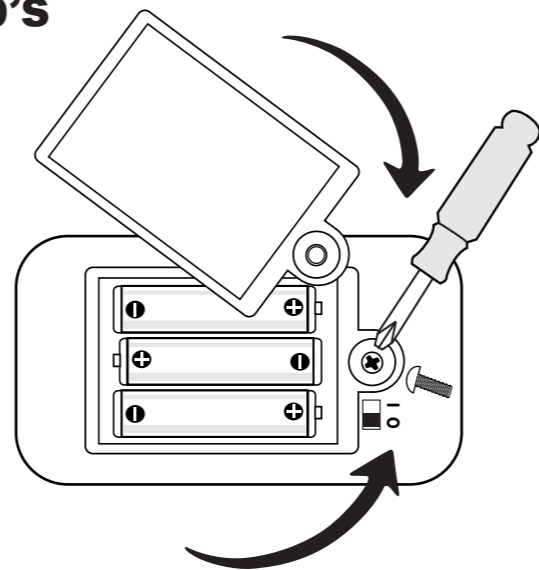


© 2025 Funrise. All Rights Reserved.

BACK





Play Guide

 
Example Sounds:

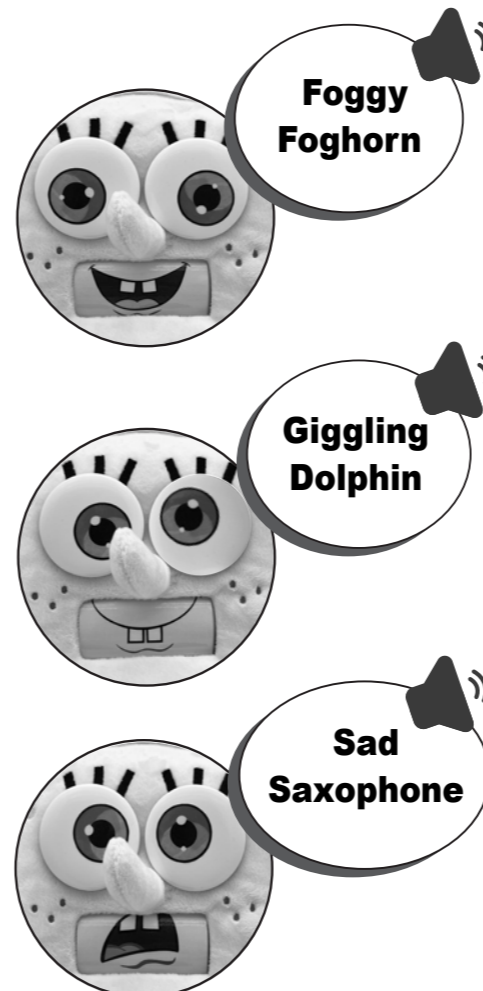

Mouth rotates for smiles and smirks!

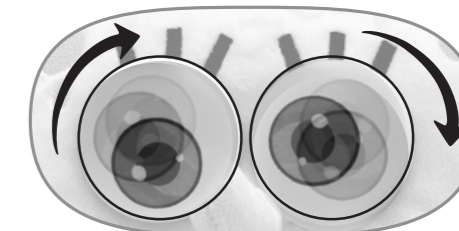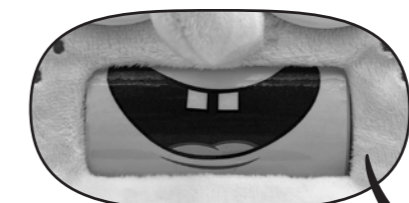  

Eyes spin for looney looks!

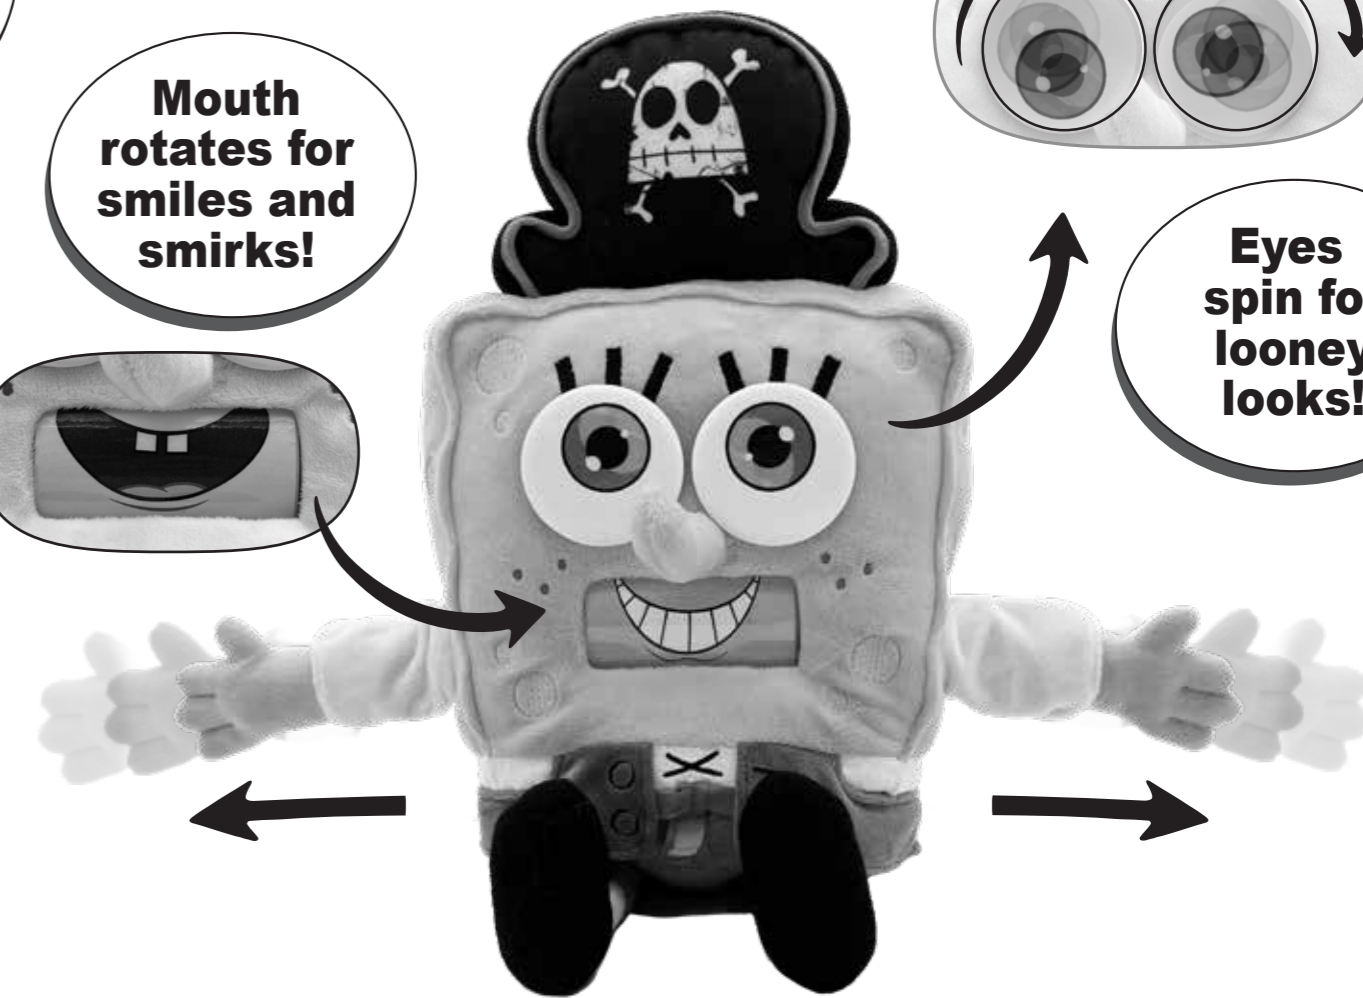 

Pull arms for fun faces and wacky sounds!

